

Eversolo BTR-12 IR CODE

Version No		Editor	Remark
V1.0		Bob	

Terminology

terminology	Generation Term
IR Remote Control	IR Transmitter

IR remote control table

Customer Code	0x8081
Protocol	NEC

Ascall code table:

Ascll code (hex)	Key	Function
0x4D	Power	Power on/off
0x5C	Source input	Switch source input
0x15	VOL +	Increase volume
0x1C	VOL -	Decrease volume
0x40	Mute	Mute
0x57	Pause/Play	Pause/Play
0x19	Next	Play next
0x16	Previous	Play previous
0x61	INFO	Play information
0x26	REPEAT	Play mode
0x44	Display	Screen display
0x58	FN	Custom key (FN)